
# K25-3E Tubular Motor NTY Operating Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12136 A/1

## E Electric roller blind draft

Note: the accessories which mark with "*" are not standared assembly unit. (Available for custom made accessories.)

Choosable

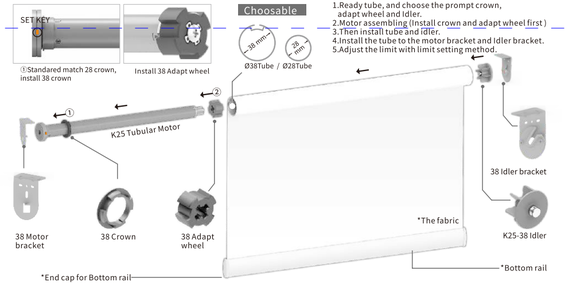



1.Ready tube, and choose the prompt crown, adapt wheel and Idler.
2.Motor assembling (Install crown and adapt wheel first )
3.Then install tube and idler.
4.Install the tube to the motor bracket and Idler bracket.
5.Adjust the limit with limit setting method.

## T Transmitter operating instructions


(* Take A13 button transmitter as an example,For other transmitters,please refer to the corresponding transmitter manual.)

**Pairing transmitter and motor:** Repeat the code pairing step to eliminate the current code. One motor can store up to 5 channels, adding a new channel will only cover the first channel.





1、Select the channel that will be paired; 2、Press【Set】button on motor; 3、Within 10s after motor stops, press【Code】button;

**Clear pairing：** Clear all pairing on the motor:





1、Press & Hold【Set】button on motor about 10s; 2. Press【Set】button on motor again.

**Speed setting：** Two speed can be adjusted, Default is first:





1、Press & Hold【Set】button on motor about 15s;

**Inching / Continuous moving interchange:** Default is continuous moving. After switching to inching moving, press & hold【Up】or【Down】button about 2s, motor will continuously moves:





1、Select the channel that will be interchanged; 2、Press & Hold【Set】button on transmitter about 10s; 3、Within 10s after motor stops, press【Up】button about 5s;

**Copy:** Add a new channel to control motor,（No need to touch motor）:





1、Select the channel that will be copied; 2、Press & Hold【Code】button on transmitter about 10s 3、Within 10s after motor stops, pair on the new channe;

**Reset direction :** ~~Reset motor direction, such as before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.~~





1、Select the channel that will be reset direction; 2、Press & Hold【Set】button on transmitter about 10s; 3、Within 10s after motor stops, press【Stop】button about 5s;


**Adjusting Limits** When you press【Up】or【Down】button，the blinds will move up or down and stop automatically at the appointed position。




1、Press up button, blinds up. Press down button, blinds down; 2、Select the channel that will be used to adjust limits; 3、Press & Hold【Set】button on transmitter about 10s; 4、Within 10s after motor stops, press【Down】button about 5s;





5、Within 10s press【Up】button to adjust up limit; 6、Press【Up/Down】button to move blinds, and then stop blinds at the appointed position; 7、Press & hold【Stop + Up】about 1s to save up limit; 8、Within 10s press【Down】button to adjust down limit ;





9、Press【Up/Down】button to move blinds, and then stop blinds at the appointed position; 10、Press & hold【Stop + Down】about 1s to save down limit;

**Third position set:** move the blinds to third position, then repeat the operation once to delete the third position.




1、Select the channel that will be used to adjust limits; 2、Blinds moves to the third limit position; 3、Press & Hold【Set】button on transmitter about 5s





4、Within 10s after motor stops, press【Down】button about 5s; 5、Within 10s after motor stops, press【Stop】button about 5s;

① Set the third position between up limit and down limit.

② Reset up limit or down limit, or repeat third position setting steps will delete the third position


③ Press & Hold [stop] button about 3s, blinds will move to the third position.

## Reset Wi-Fi:





1、Press & Hold【Set】button 2、Press & hold【Code】button

## Configure network method:

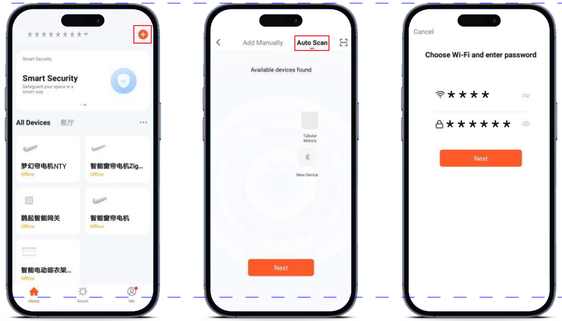


01.Open Tuya App, click "+" 02.Click "Auto Scan", when prompt "Available devices found" then click "next" 03.Input Wi-Fi name and password, then click "next"

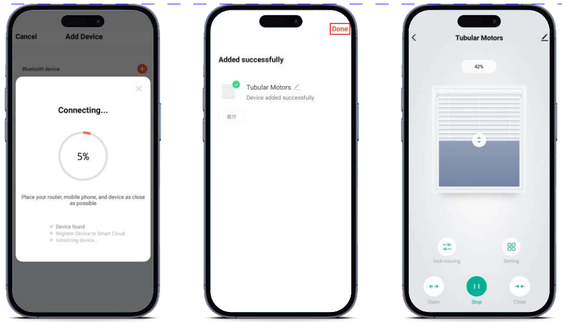


04.Waiting for connecting. 05.After added successfully, click "done" 06.Operation Interface

## Upper limit/down limit/ third position setting: It refers to the highest/lowest position that can be reached when the blinds moves up/down.

Kind tips ⚠

Upper and down limit settings:

·Confirm the opening/closing direction, press the [Open] to run the blinds upward, press the [Close] to run the curtain downward; if the direction is opposite, please refer to the reversing function to reset

When setting or deleting the upper or down limit, the third position will be deleted

Third position Settings:

·Third position cannot be set near the [upper limit] or [down limit]


Third position Delete:

·Only when the blinds run to the third position, the third position can be deleted.

Reverse direction


Facing the blinds when installing, it is [Forward] when the motor [Setting key] is on the right hand side; it is [Reverse] when on the left hand side

### Upper limit/Down limit/Third position setting method

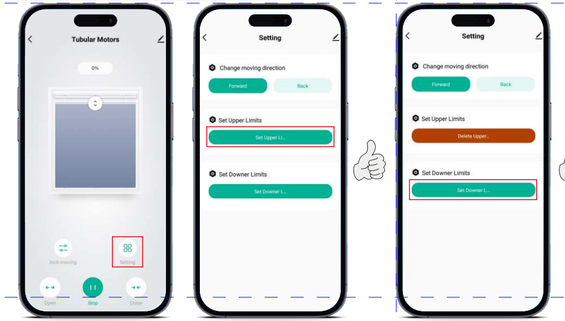


01.Press [Open], when blinds moves to target position, press [Stop], and then press [Setting]. 02.Press [set upper limit], press [confirm] when prompted, blinds will run down for 1s, setting is successful. 03.Return to the control interface, press [Close], when blinds moves to target position, press [Stop], then press [Setting], and then press [set down limit]. Press [confirm] when prompted, blinds will run upward for 1s, setting is successful.

### Third position setting method

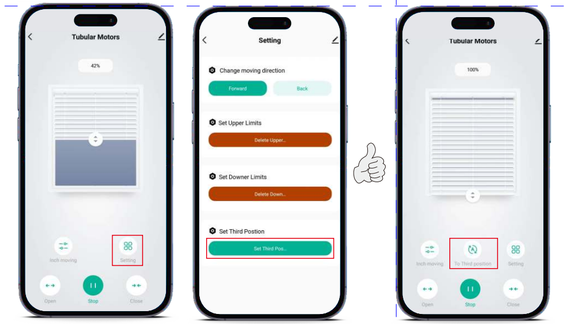


01.Press [open] or [close], when the blinds moves to the favorite position, press [stop], then press[Setting]. 02.Press [set third position], the blinds will run up and down for 1s each, setting is successful. 03.After the setting is completed, you can see the "third position" icon.